



Linkage assemblies  
© Jenvey Dynamics 1999 - 2006

Turn bracket 'A' to change reach range.

Reverse assembly to lead cable in opposite direction

