

Lotus S1 adapter



Functions assignment

No.	EMU pin name	Function
1	AUX 2	Fuel pump
2	AUX 3	Fan
3	AUX 4	Tacho
4	H-bridge #1 winding A	IACV
5	H-bridge #1 winding B	IACV
6	H-bridge #2 winding A	IACV
7	H-bridge #2 winding B	IACV
8	Ignition coil #1	Ignition coil
9	Injector #1	Injector cyl. #1 & #4
10	Injector #2	Injector cyl. #2 & #3